

Locating the Controller Board Serial Number

1. Printed on the original package for the controller





2. Printed on a label on the card itself



3. Viewable through Device Manager on the PLOTBASE Server PC



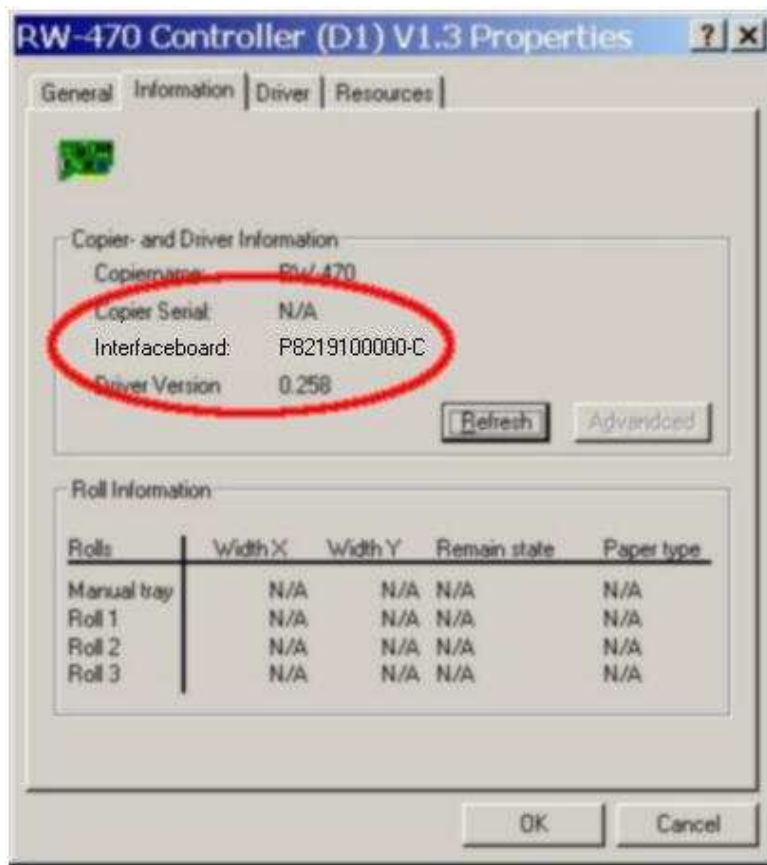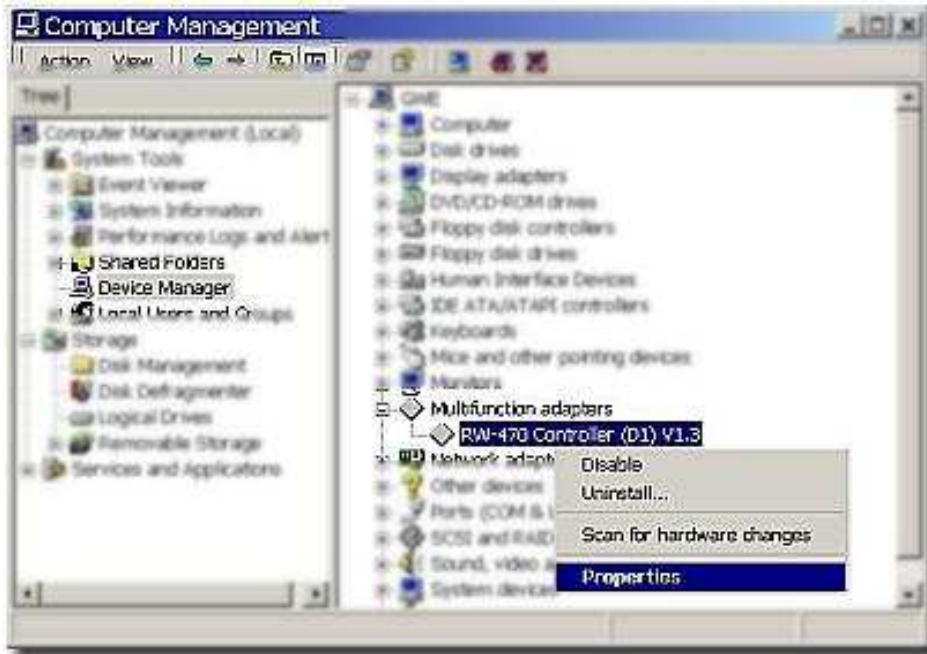

Also viewable in 'License Manger' of the PLOTBASE server PC.

Please contact RATIO US for support services if you require additional assistance.
support@ratio.us 262-558-4900 <http://www.ratio.us>